

ASSEMBLY INSTRUCTIONS

Assemble on Hard Surface

Parts List

Bundle of 10 dowels & 2 sideframes



Tools Required



Hammer or Mallet



Step 1

A. Open one side frame on floor and insert dowels into connector holes by tapping firmly with hammer.

B. Latchstick must be positioned on inside of frame in the position shown. **Position latchstick correctly before inserting dowels in connector holes.**

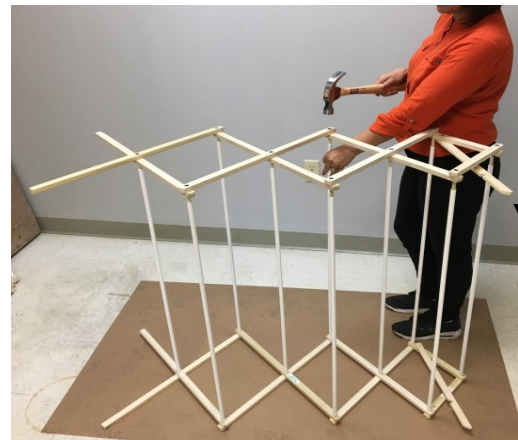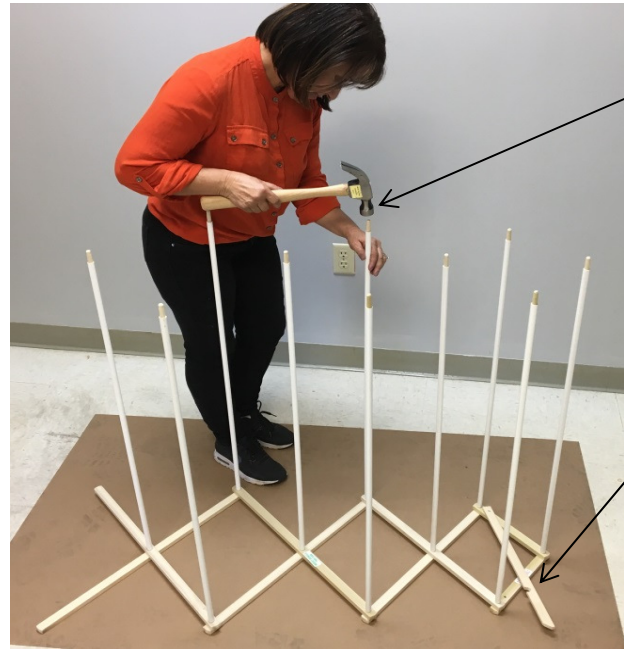

Step 2

Line up holes in remaining side frame with tips of dowels. Tap each side frame hole onto dowel **evenly a little at a time** until all dowels are fully inserted in connectors. **See correct latchstick position**

For help assembling this product, or if you find parts missing, please e-mail us @ tom.mckelvey@madisonmill.com. You may also view an instructional video on our website @ www.madisonmill.com