

**ASSEMBLY INSTRUCTIONS**  
**Assemble on Hard Surface**

**Parts List**

Bundle of 10 dowels & 2 sideframes




**Tools Required**

Hammer or Mallet



**Step 1**  
Open one side frame on floor.  
**Latchstick** must be positioned on inside of frame as shown before inserting dowels.  
Position Latchstick and insert dowels into connector holes by **tapping firmly with hammer**  
Dip dowel tips in liquid soap or Vaseline if tight

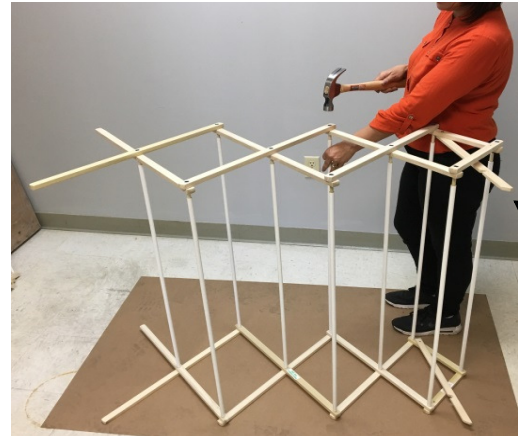

**Step 2**  
Line up holes in remaining side frame with tips of dowels.  
Tap each side frame hole onto dowel **evenly a little at a time** until all dowels are fully inserted in connectors.  
**See correct latchstick position**

For help assembling this product, or if you find parts missing, please e-mail us @ [tom.mckelvey@madisonmill.com](mailto:tom.mckelvey@madisonmill.com)